



CREATOR

5761





1



2

2



3



 
4



5



6

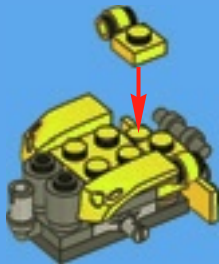

7





1



 
2



3



4

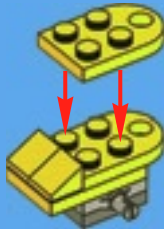

8



9



10



 
11



12



1

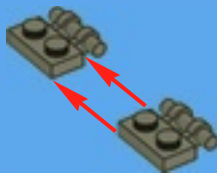

2



3



4



13



14





1



2



3



4



5



6



1



 
2



3



4

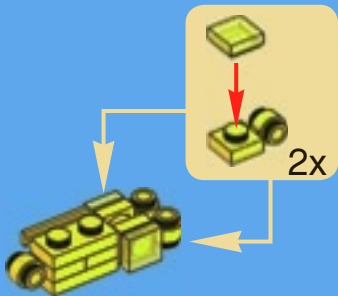

5



 
6




7



8

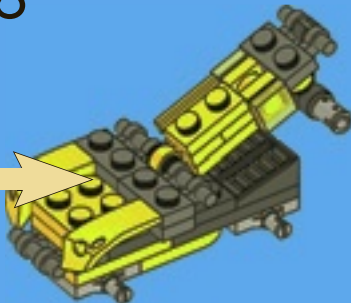


9

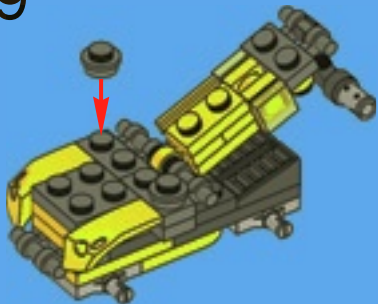 

10



 11

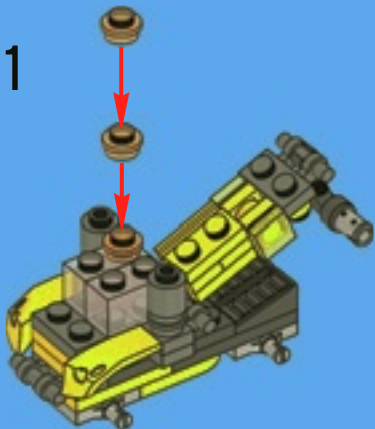

12





1



2



3



 
4




5




6

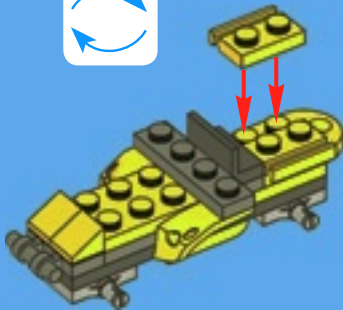


7

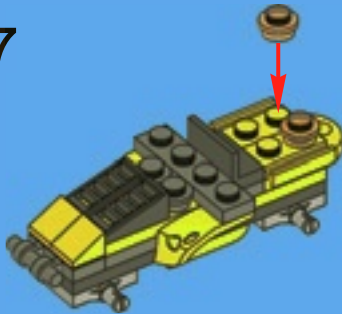 


8

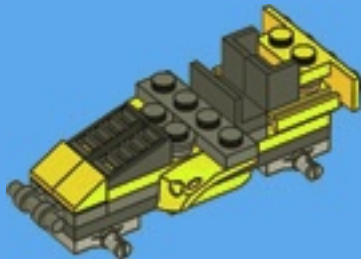 

9

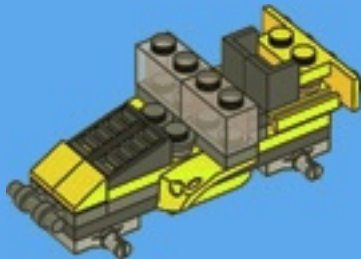 

10

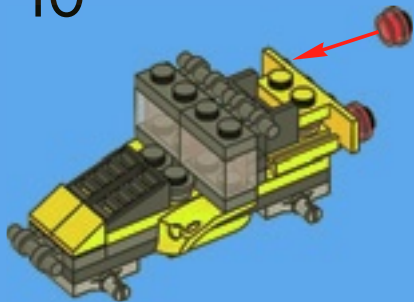 

11



12



13





2x
4504381



2x
302124



4x
408124



2x
4141630



3x
4188313



1x
4282745



2x
3005741



1x
4283123



2x
4541191



2x
302026



2x
4106347



1x
486526



2x
4141580



4x
4514560



2x
3003944



2x
4226179



3x
4222960



2x
4211504



4x
4211764



1x
4211483



2x
4211090



3x
4211094



1x
4211001



1x
4611703



4x
4210660



2x
4210633



Customer Service

Kundenservice



Service Consommateurs

Servicio Al Consumidor

www.lego.com/service or dial



   : 00800 5346 5555

  : 1-800-422-5346



CREATOR

5766



 www.LEGO.com

©2011 The LEGO Group. 4623037 / 4623040

3 IN 1