



 
Disney Princess

41141



LEGO.com/disneyprincess



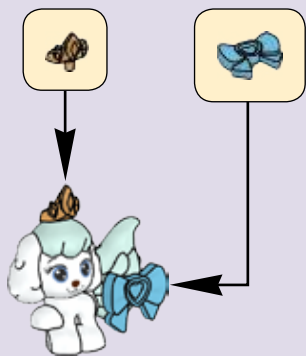

1

 


2




3




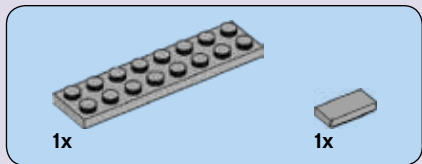

1


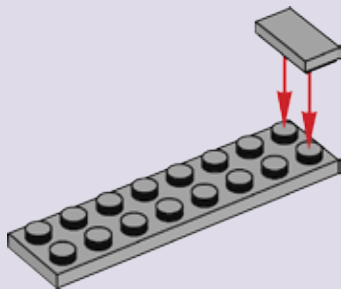 


2

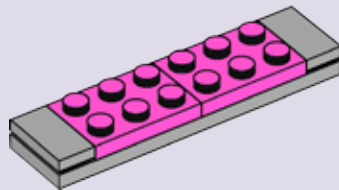 




3

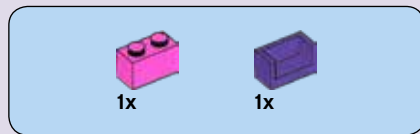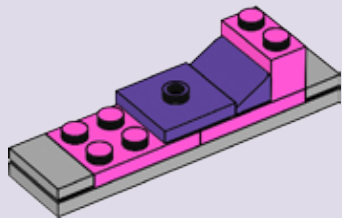  


4

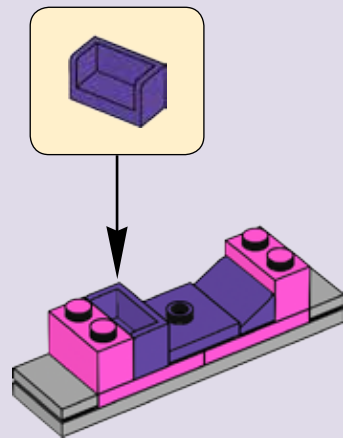 



2x

 5

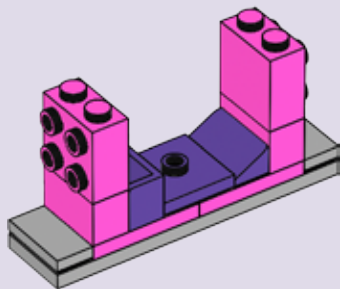


6




2x

 6

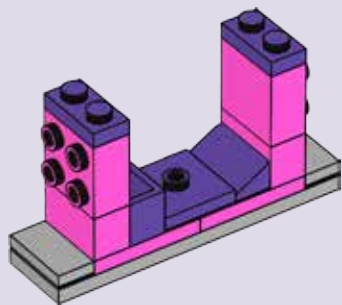

2x


 
7

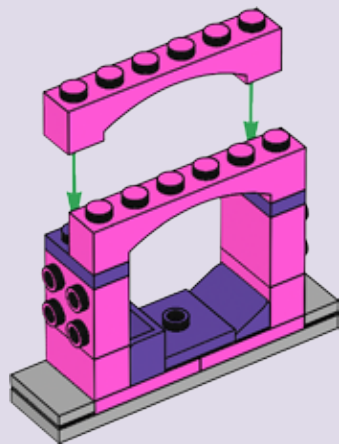



2x

  8

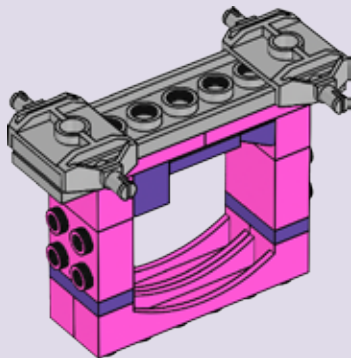






1x



2x

   9

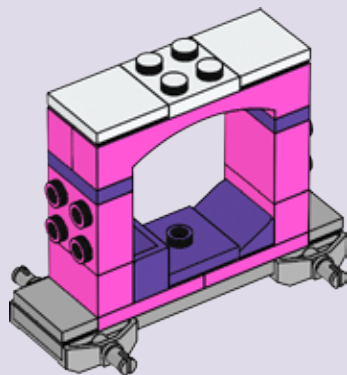

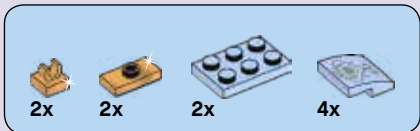

10

 
1




2




3

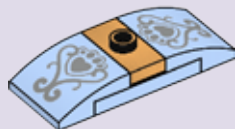

4

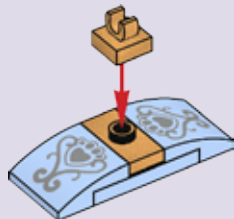 

2x

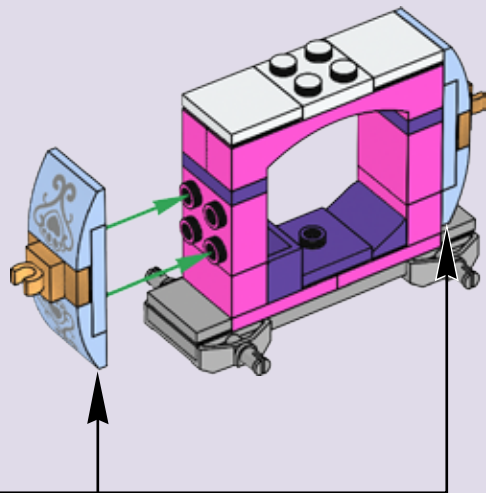 



2x

 


 
2x

11




2x

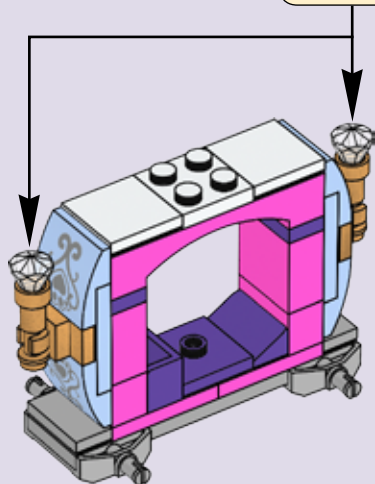

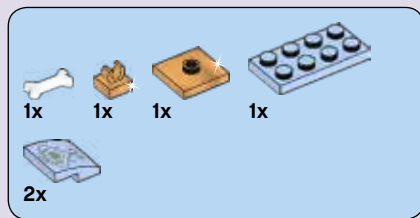


12

 
1

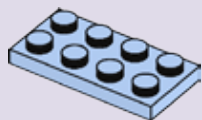

2


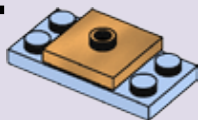 


3

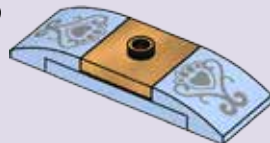 


4



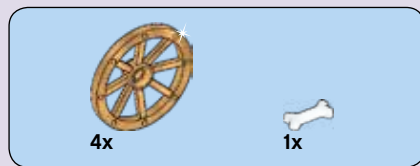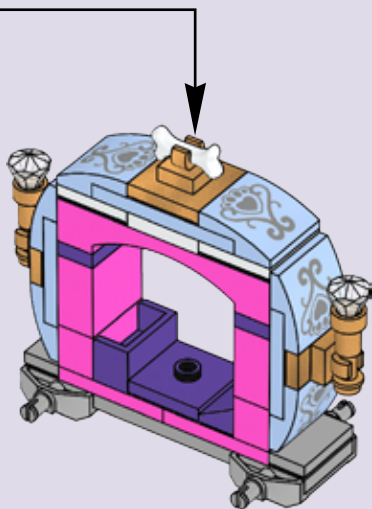  

13

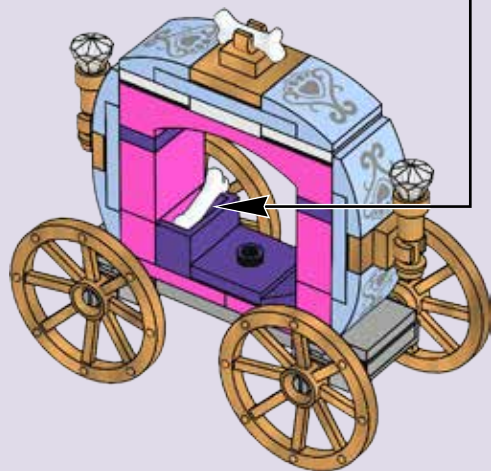 




1




 2

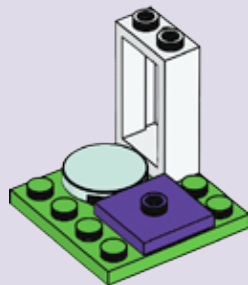



3

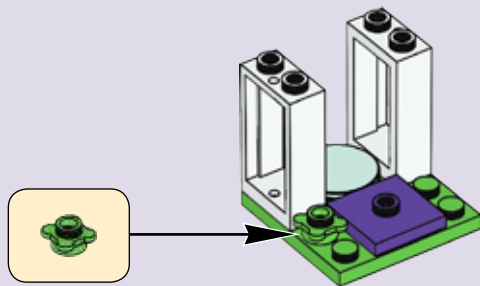 




1x




1x

 4

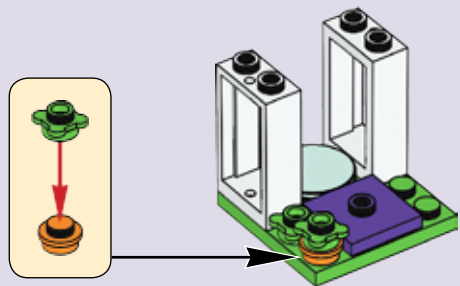

2x

 
5

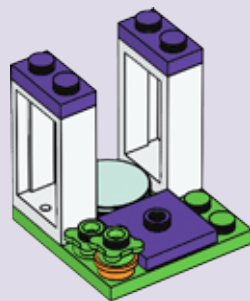



2x

 6

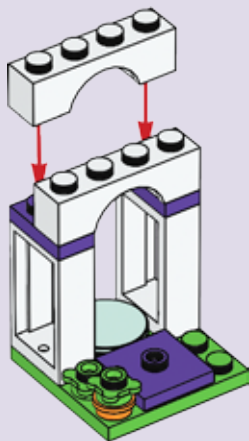




1x

7



4x

 
8

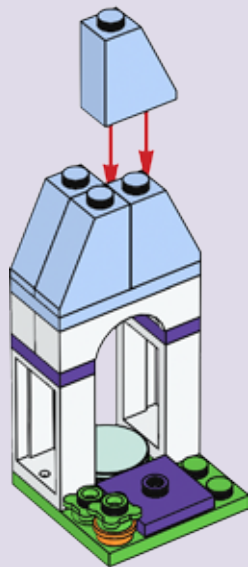



1x

 9

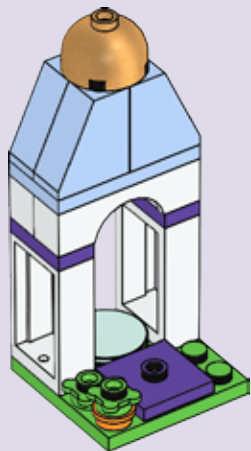



1x




1x

  10

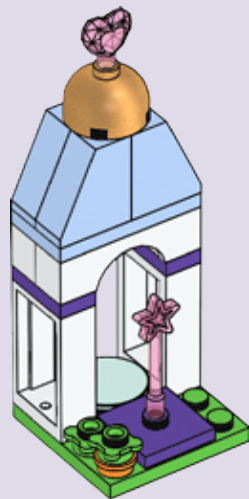


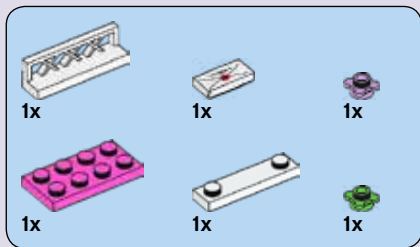


1

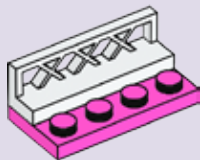 

2

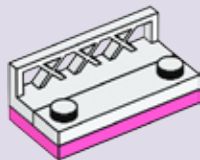 

3

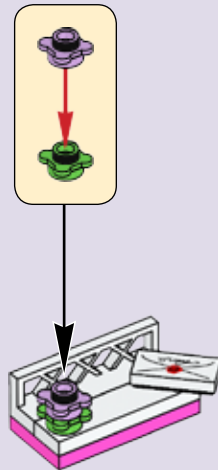 





1x
6050914



1x
6093053



2x
4536521



1x
4119410



1x
6134400



2x
4600294



2x
306801



1x
302201



1x
4597131



2x
365901



1x
4550171



3x
4619599



1x
4617799



2x
4248937



1x
6097099



1x
4157103



1x
6058337



1x
4499710



2x
4211414



2x
4211569



1x
4211406



4x
6060798



6x
6135348



2x
6132418



2x
6132423



2x
6132426



2x
6132425



2x
4621545



2x
6060801



1x
6056263



1x
4566607



4x
4655695



1x
6134716



2x
4659770



1x
6134260



3x
6071259



1x
4569316



2x
6092594



3x
4538126



1x
6107193



4x
6093573



1x
6023825



1x
6096948



1x
6074906

Customer Service

Kundenservice

Service Consommateurs

Servicio Al Consumidor

LEGO.com/service or dial



: 00800 5346 5555

: 1-800-422-5346



41055



41063



41062



41061



41068



41066





Disney
PRINCESS



41141



41069



41140



41142



Disney
Whisker Haven
TALES
palace pets



LEGO.com/disneyprincess





Friends



41116



41110



41115



41118



41119