 





40237




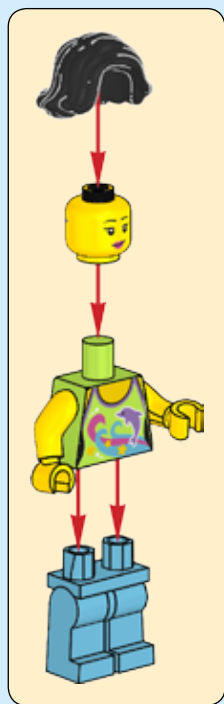




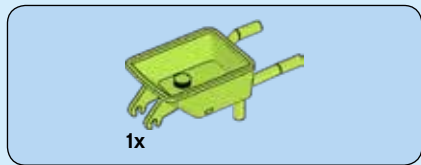 


1

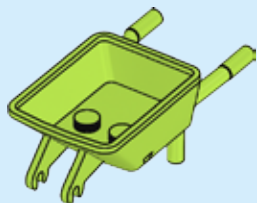 

4

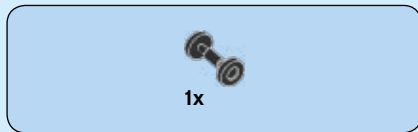 

2

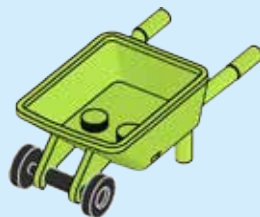 



1x

3

 


 
1x




1x

4




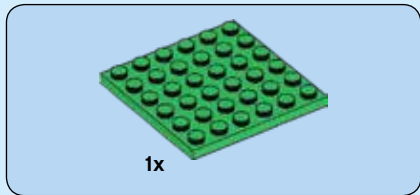


1

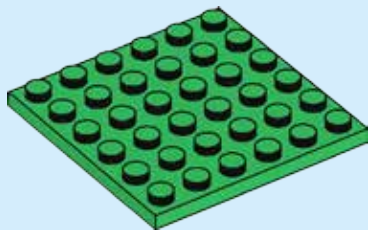 

6

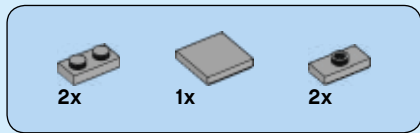 

2

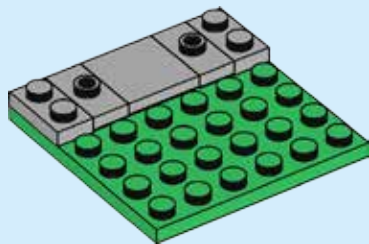 




2x




2x

 
3

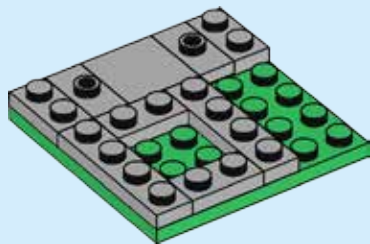


2x

  4

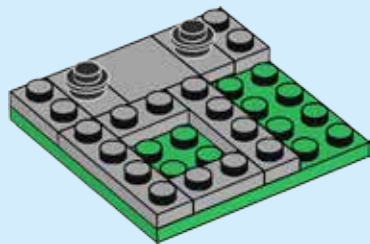

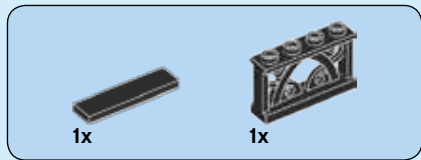


5

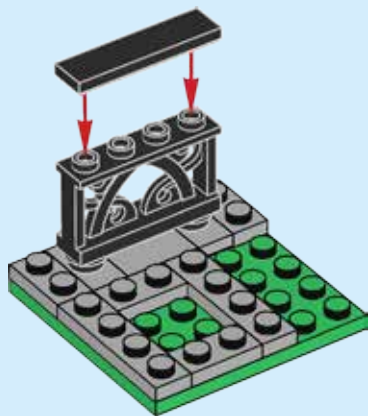 

8



 6

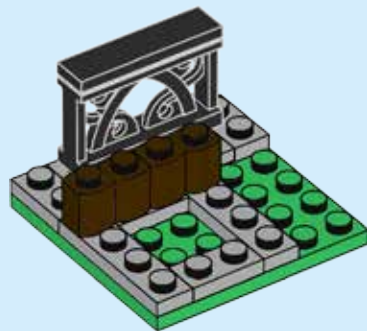




1x



1x

 7

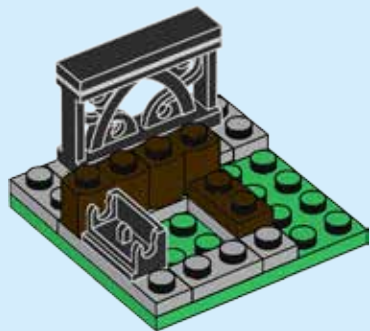


1x



1x

 
8

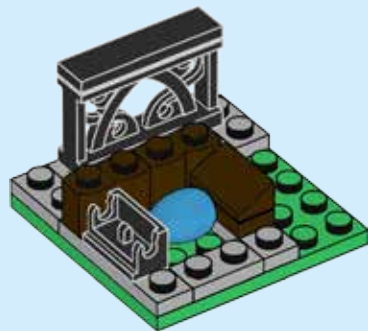



2x

 9

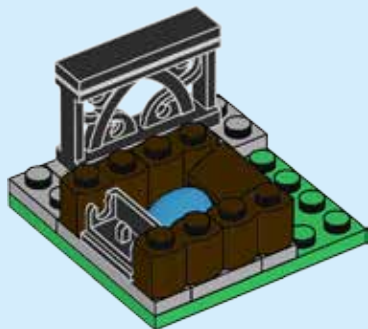



10





2x

  10

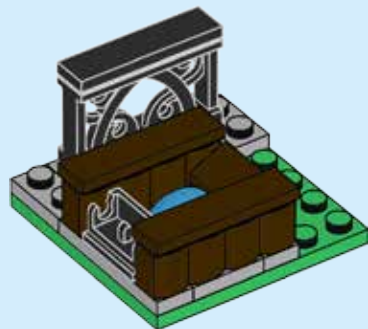

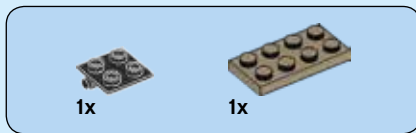

11

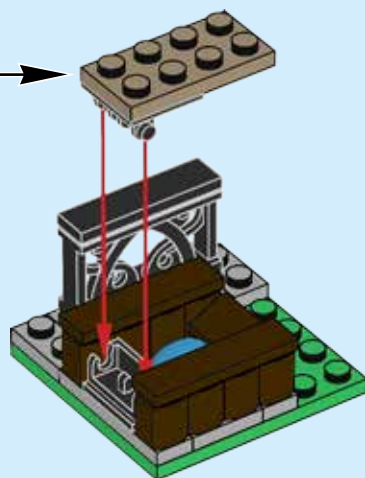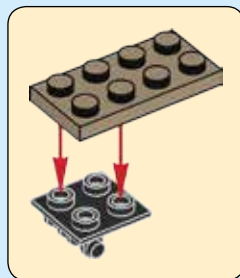  




2x



12



 12


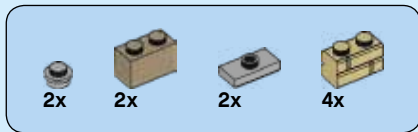


13

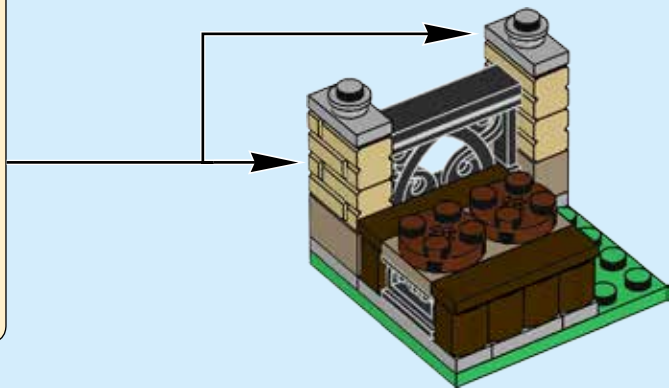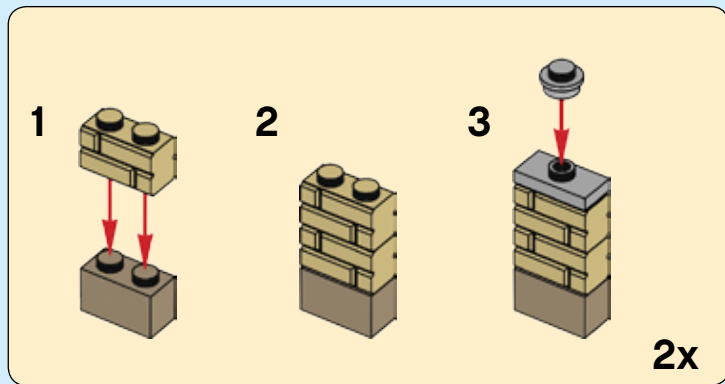  





14

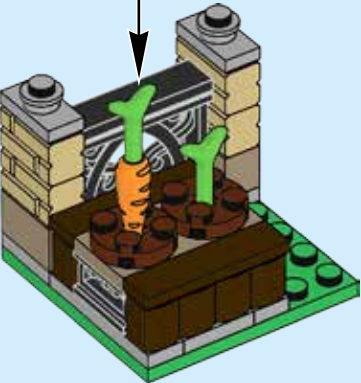  




1x

  1

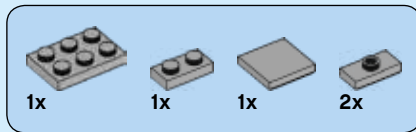
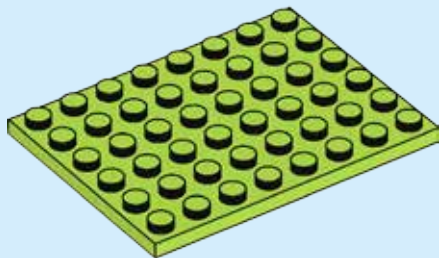


2

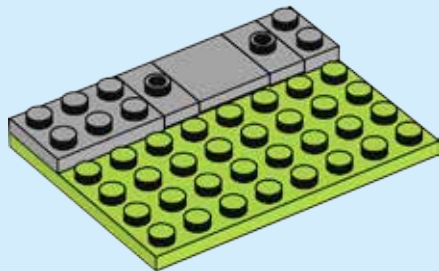 




3

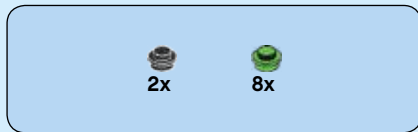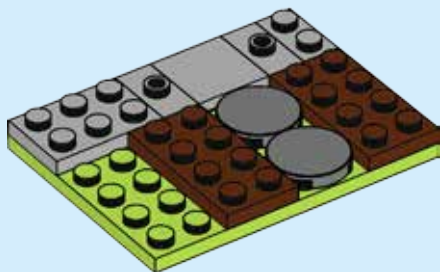  

4

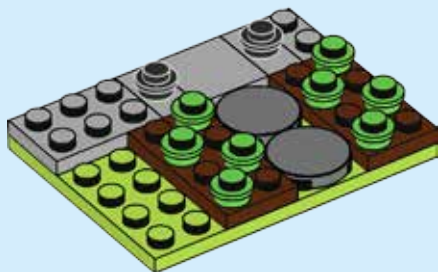 



2x



2x



2x



2x

5



1x



 
 
1x

6





7

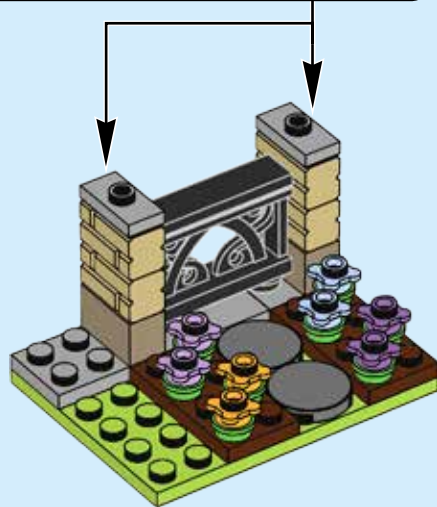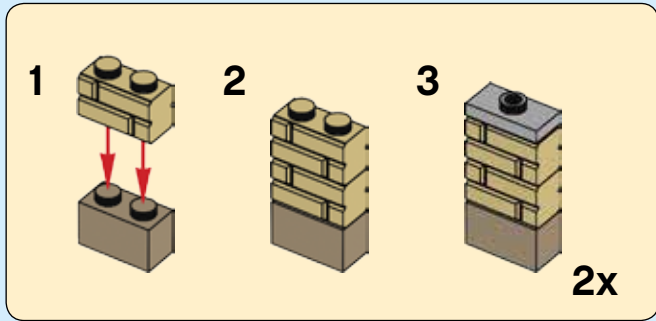






1x

 
8




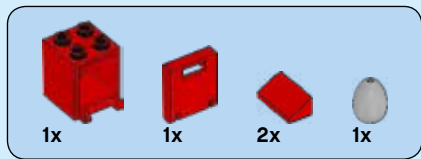



9

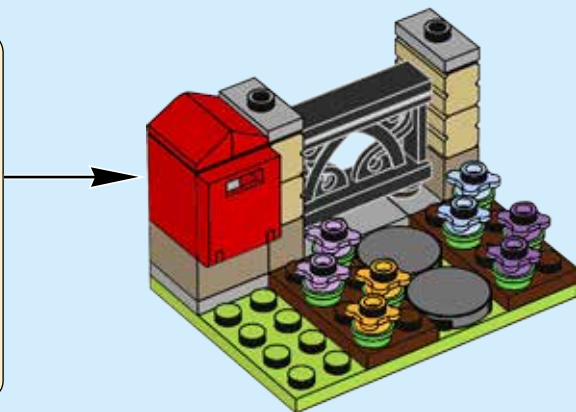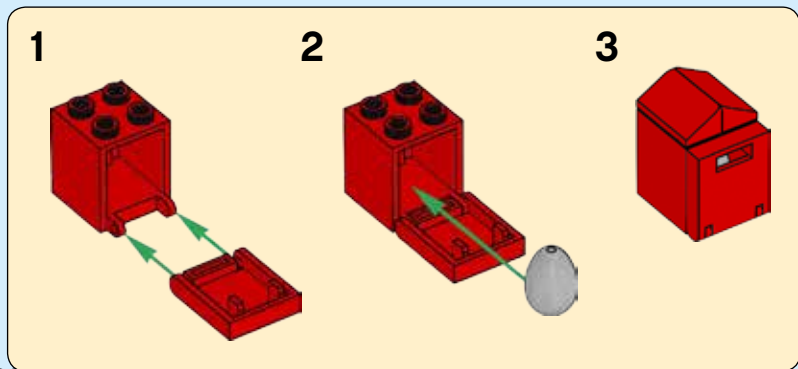  


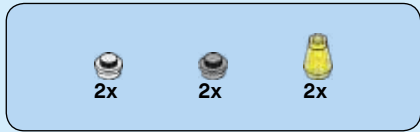 


10

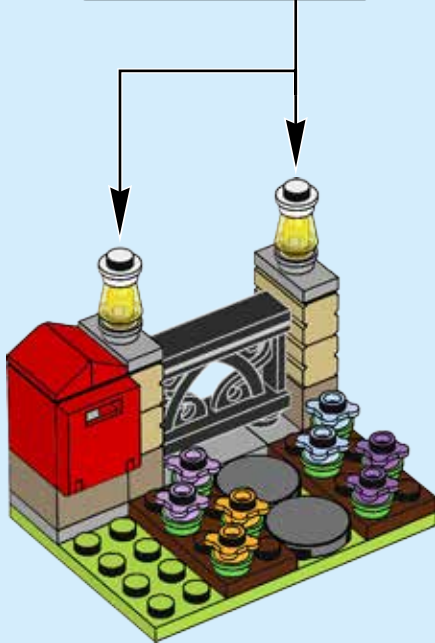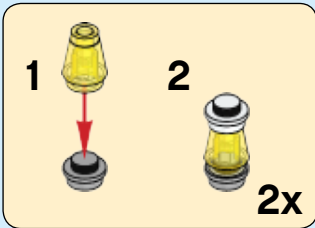  


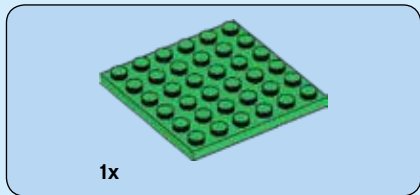 


1

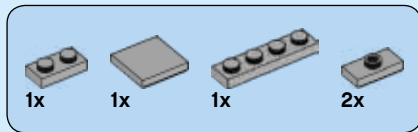 
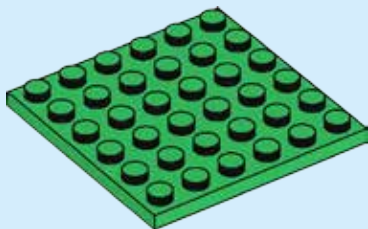 


2

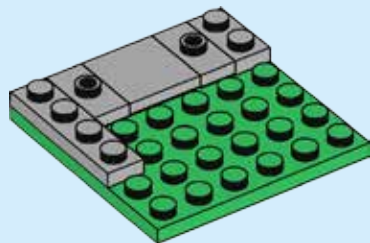 


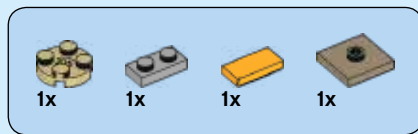 


3

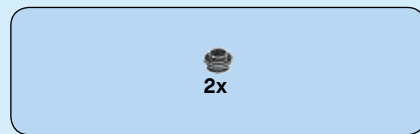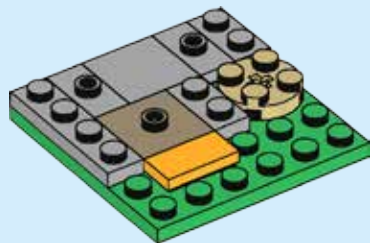  


4

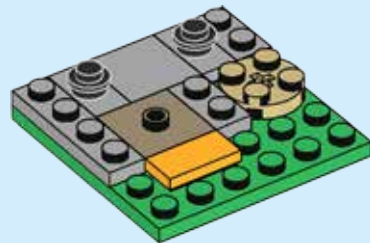 


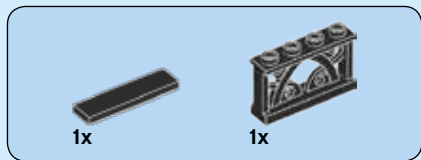 


5

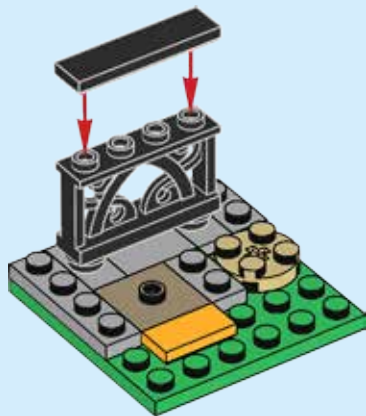 



6

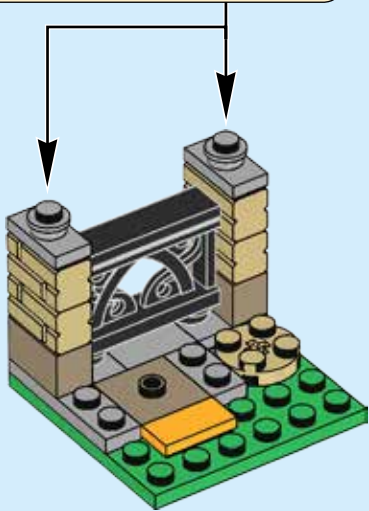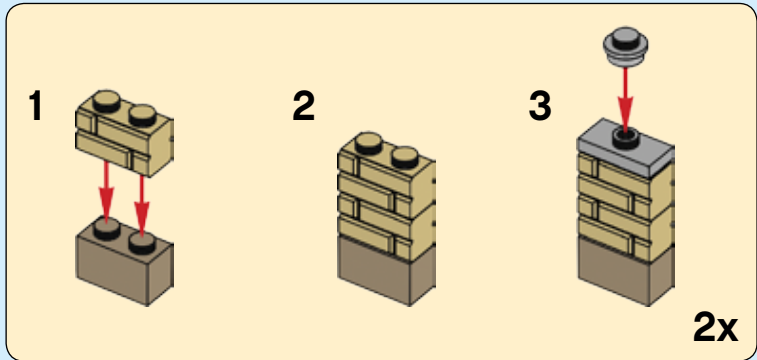  




1x



1x

 7

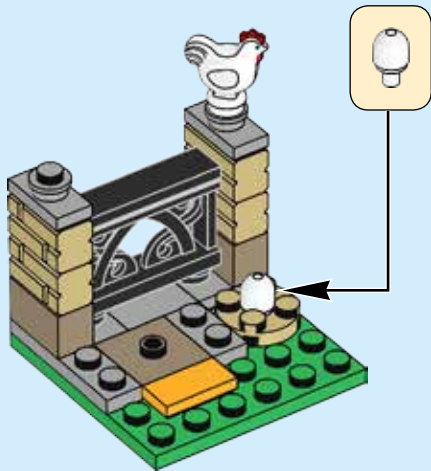


1x



1x

 
8

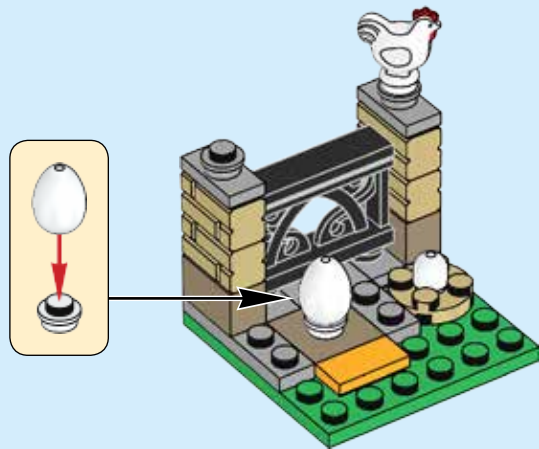




2x

 9

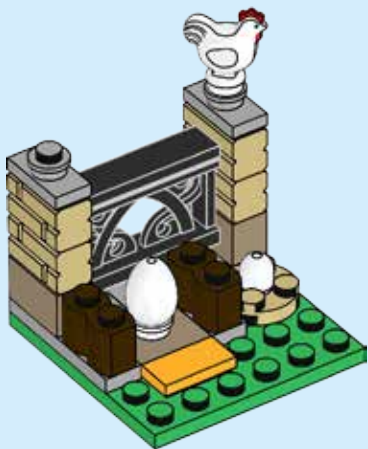

2x

 
10

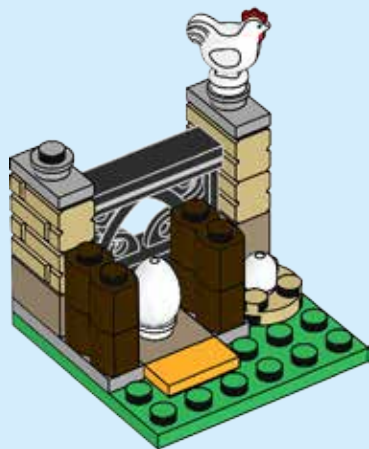



1x

 11

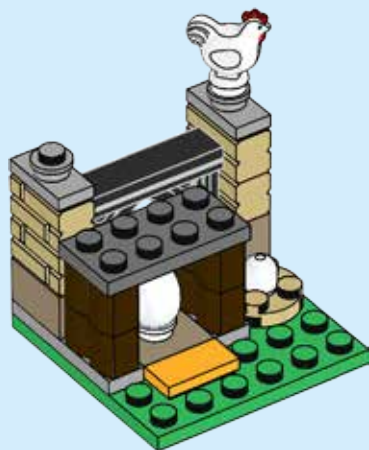



28





1x

  12

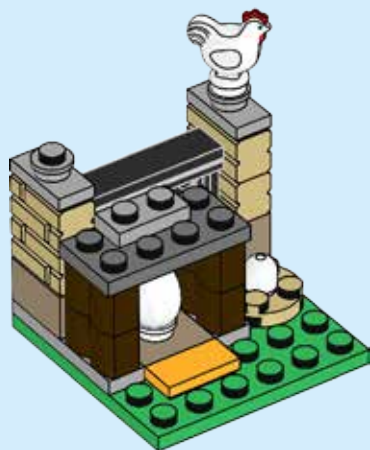


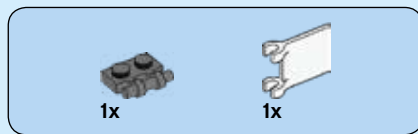

13

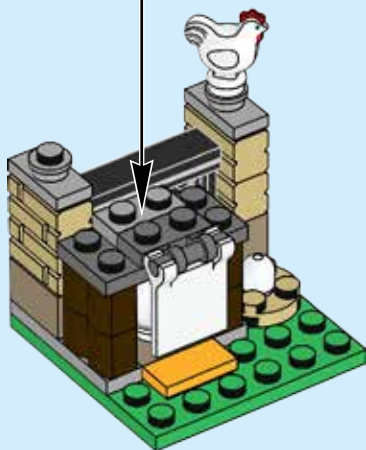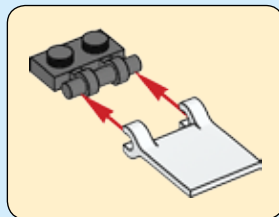  

14

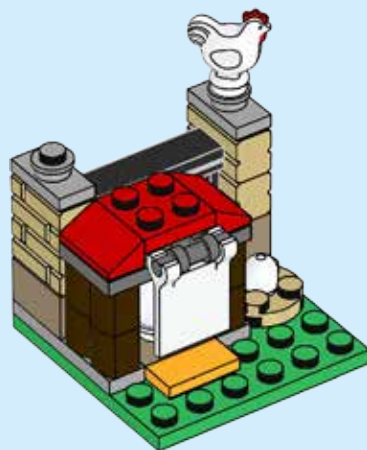 





Customer Service

Kundenservice

Service Consommateurs

Servicio Al Consumidor

LEGO.com/service or dial



: 00800 5346 5555

: 1-800-422-5346

