 


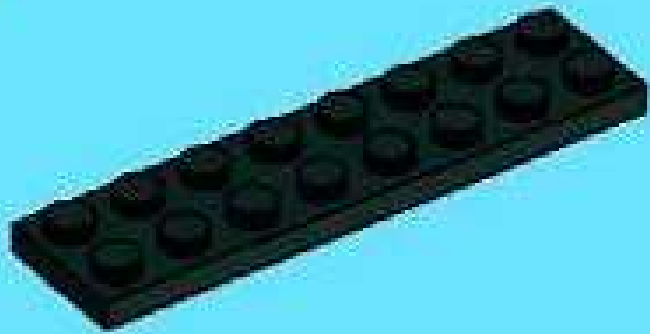


1




2

 
2

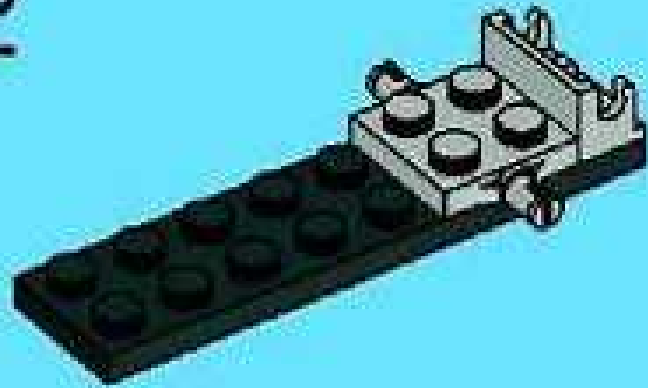

3

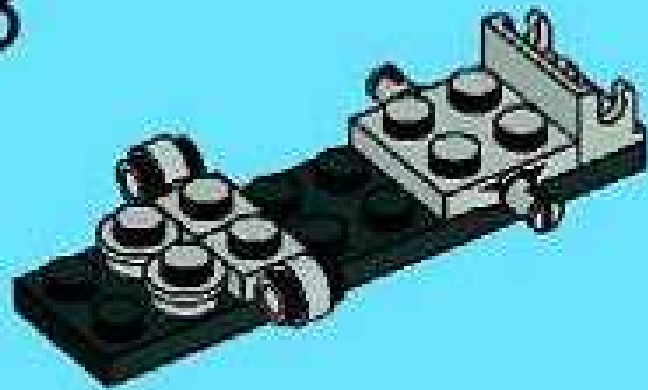 



4

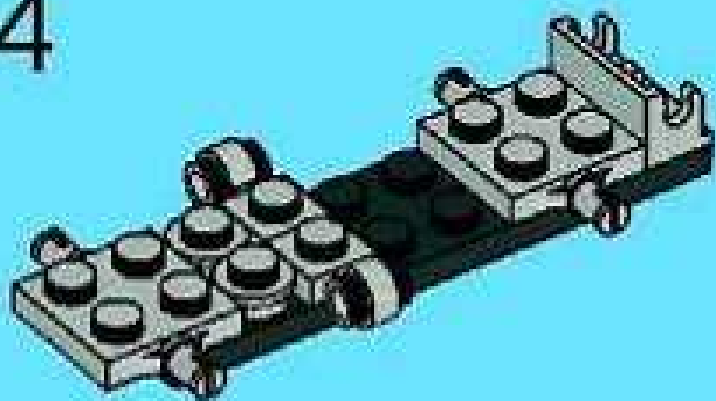 

5



  
6

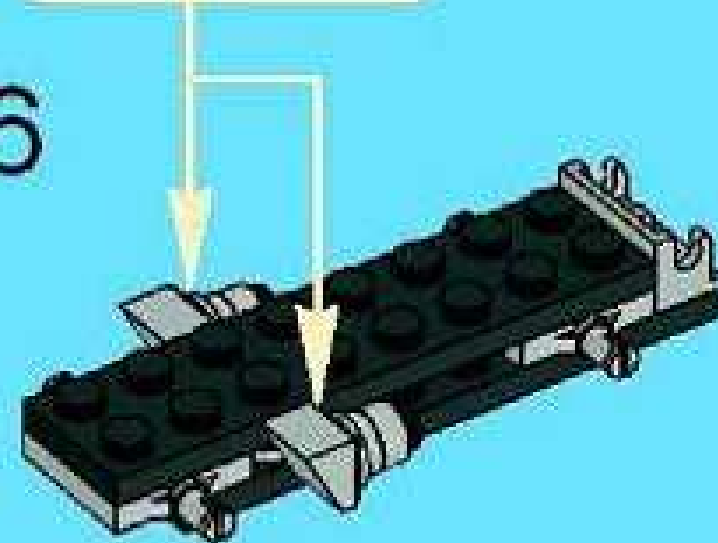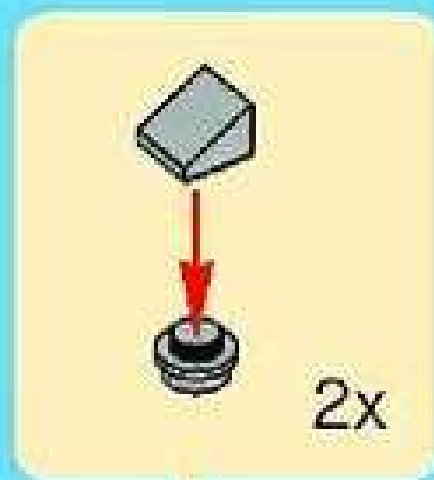


7



 
8

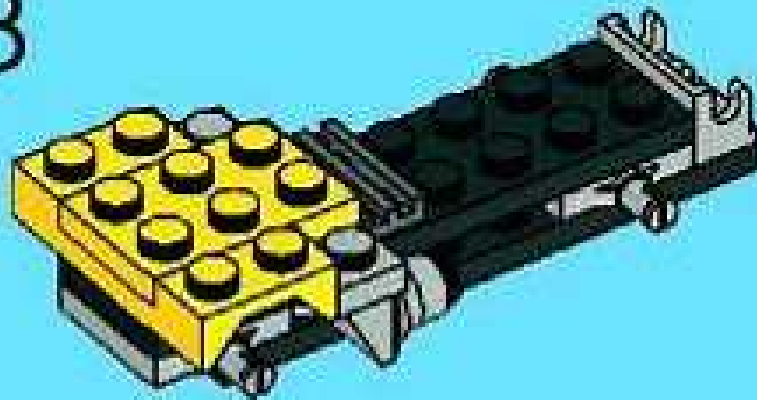


9

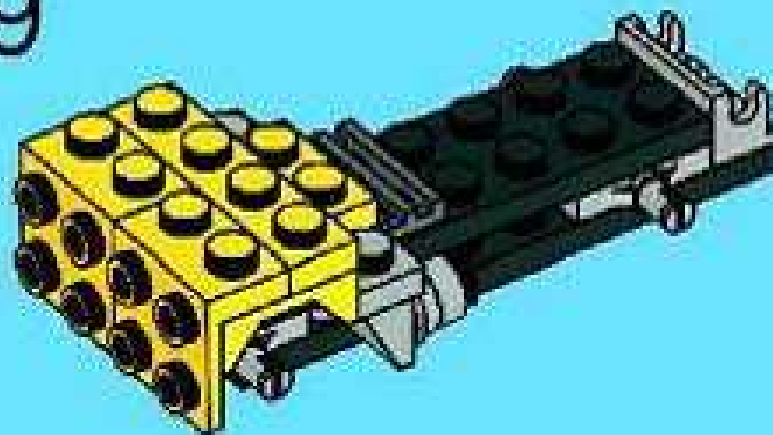 


1

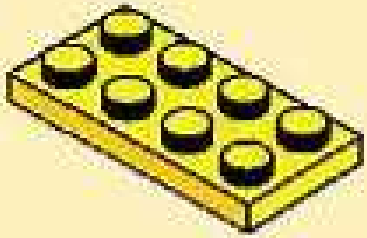 


2

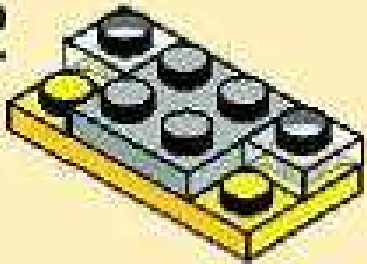 


3

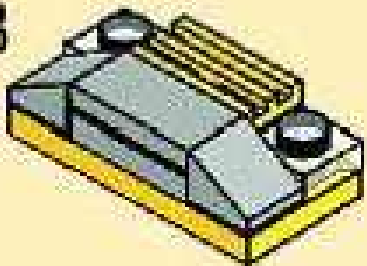 


10

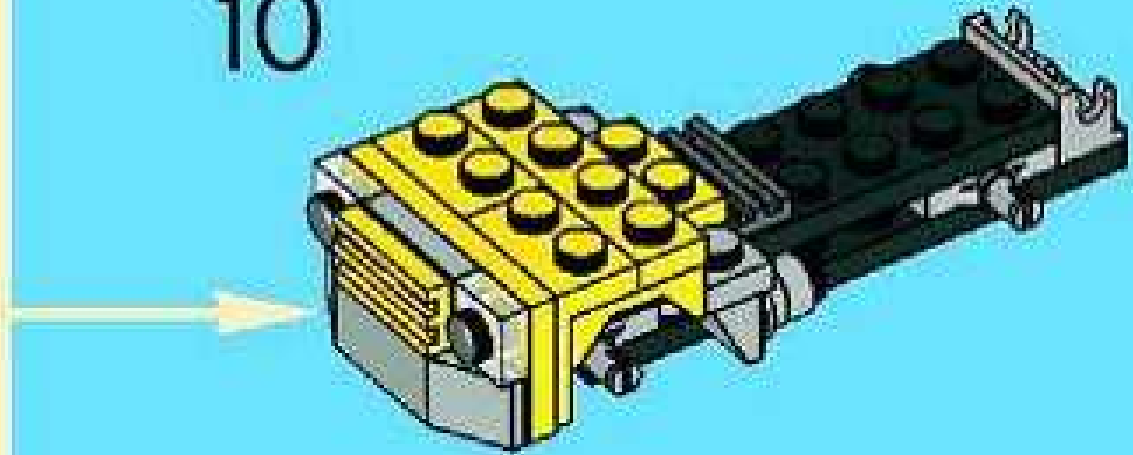 


11

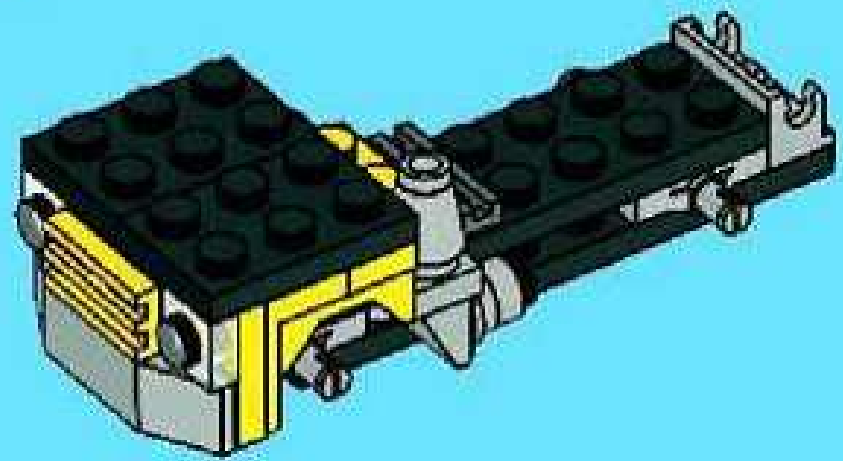 


12

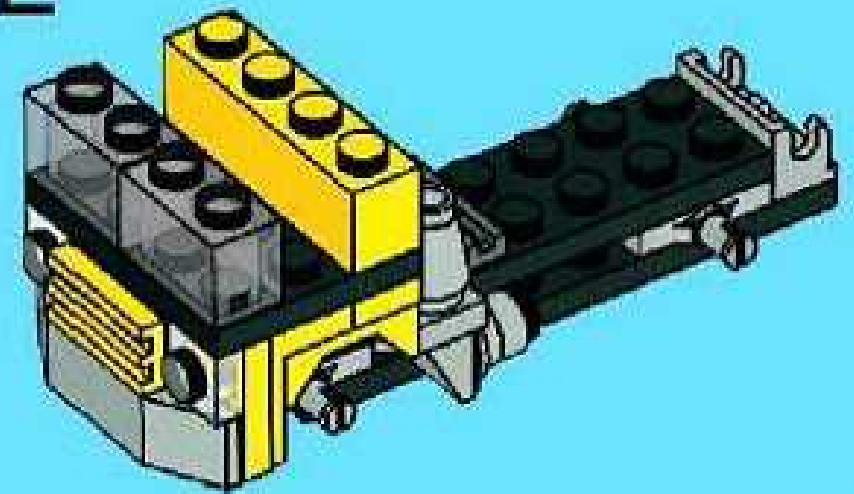 

13

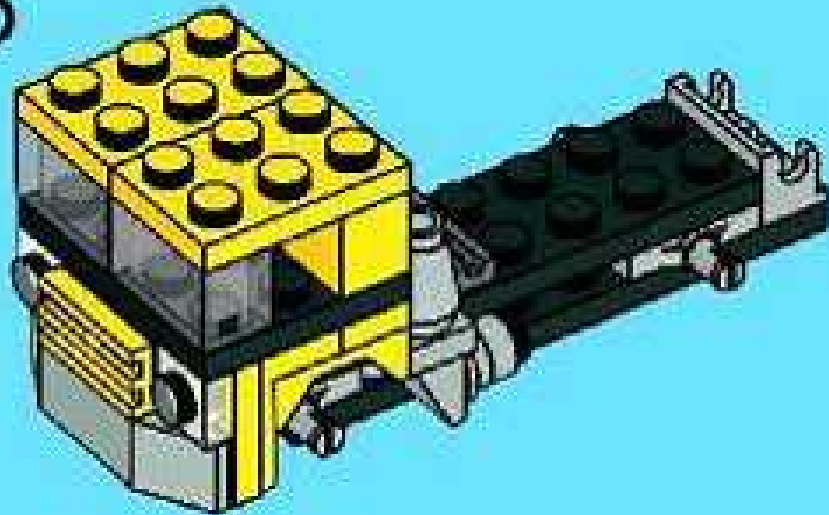 


14

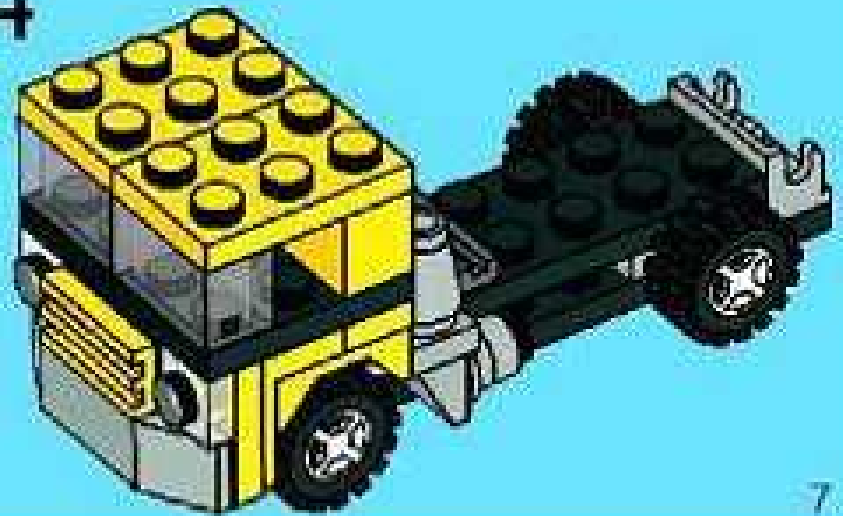 





1

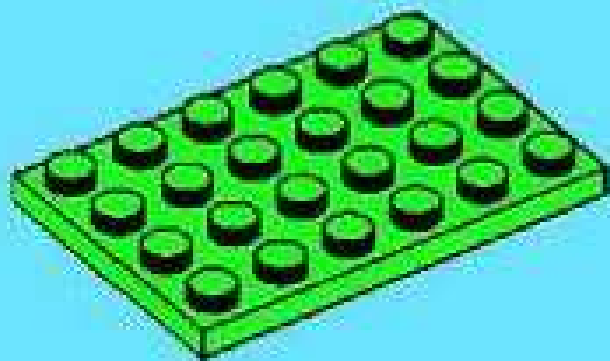 


2

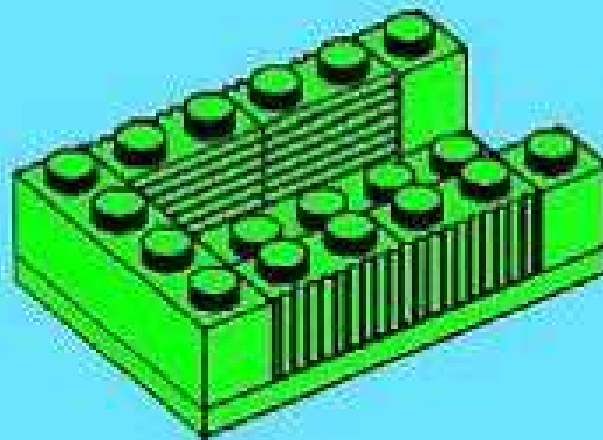 


3

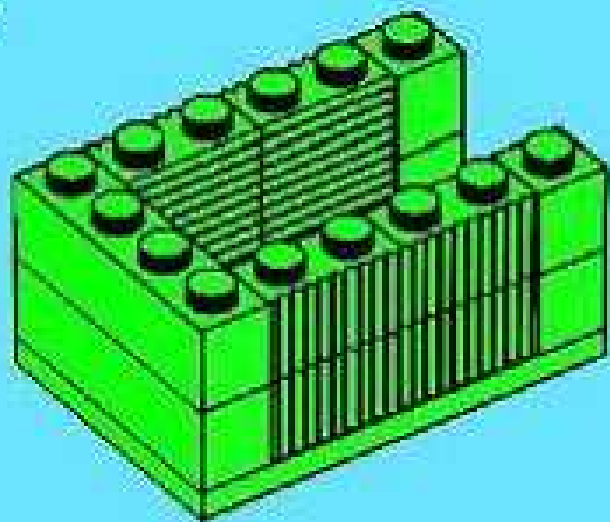 


4

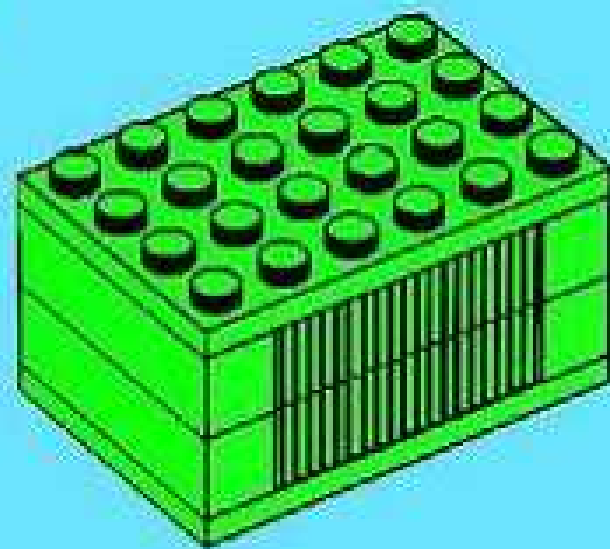 

5

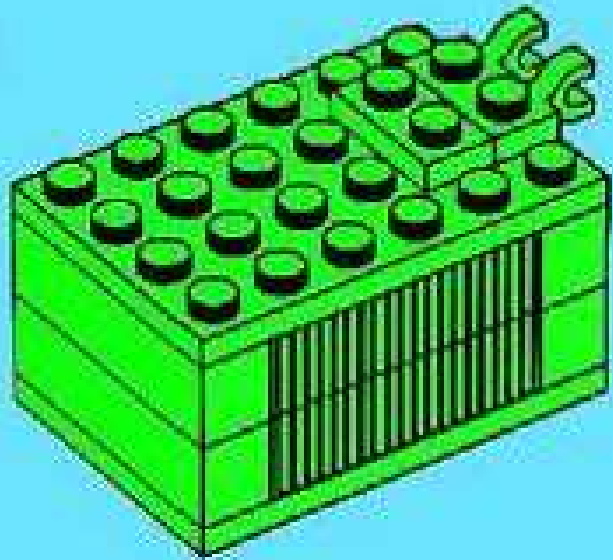 

6

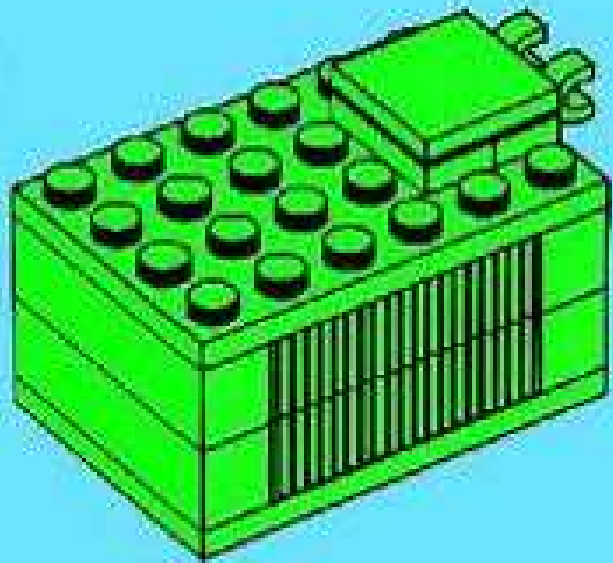 


7




 15




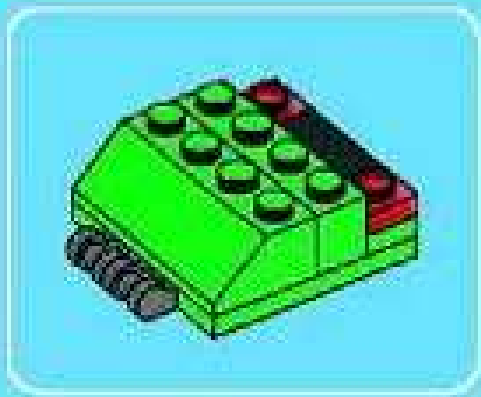


1

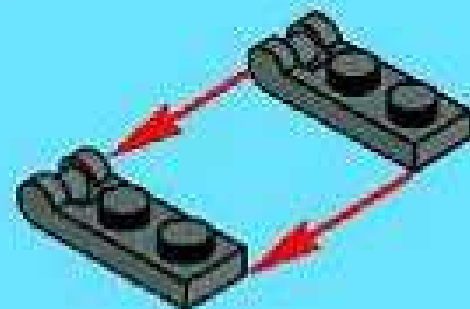 


2

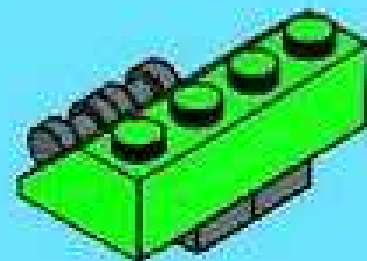 


3

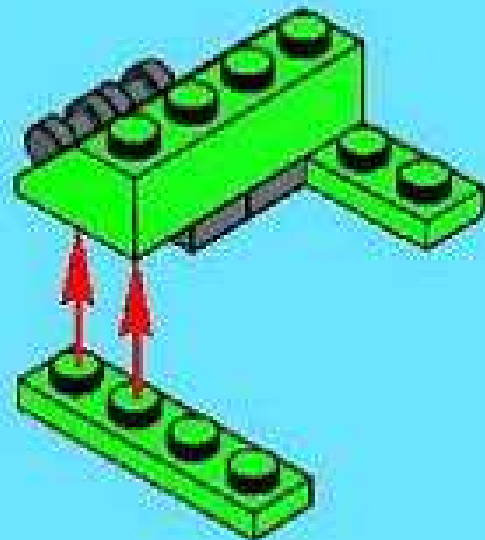 


4

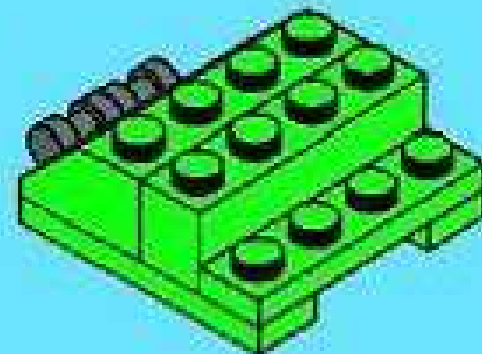 

5

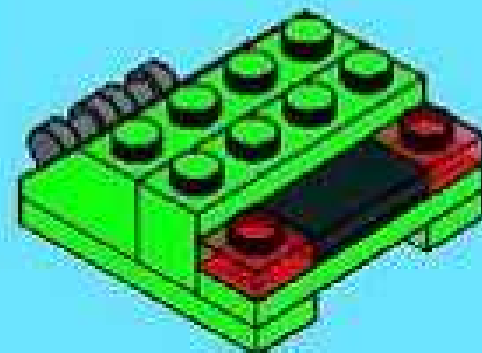 

16

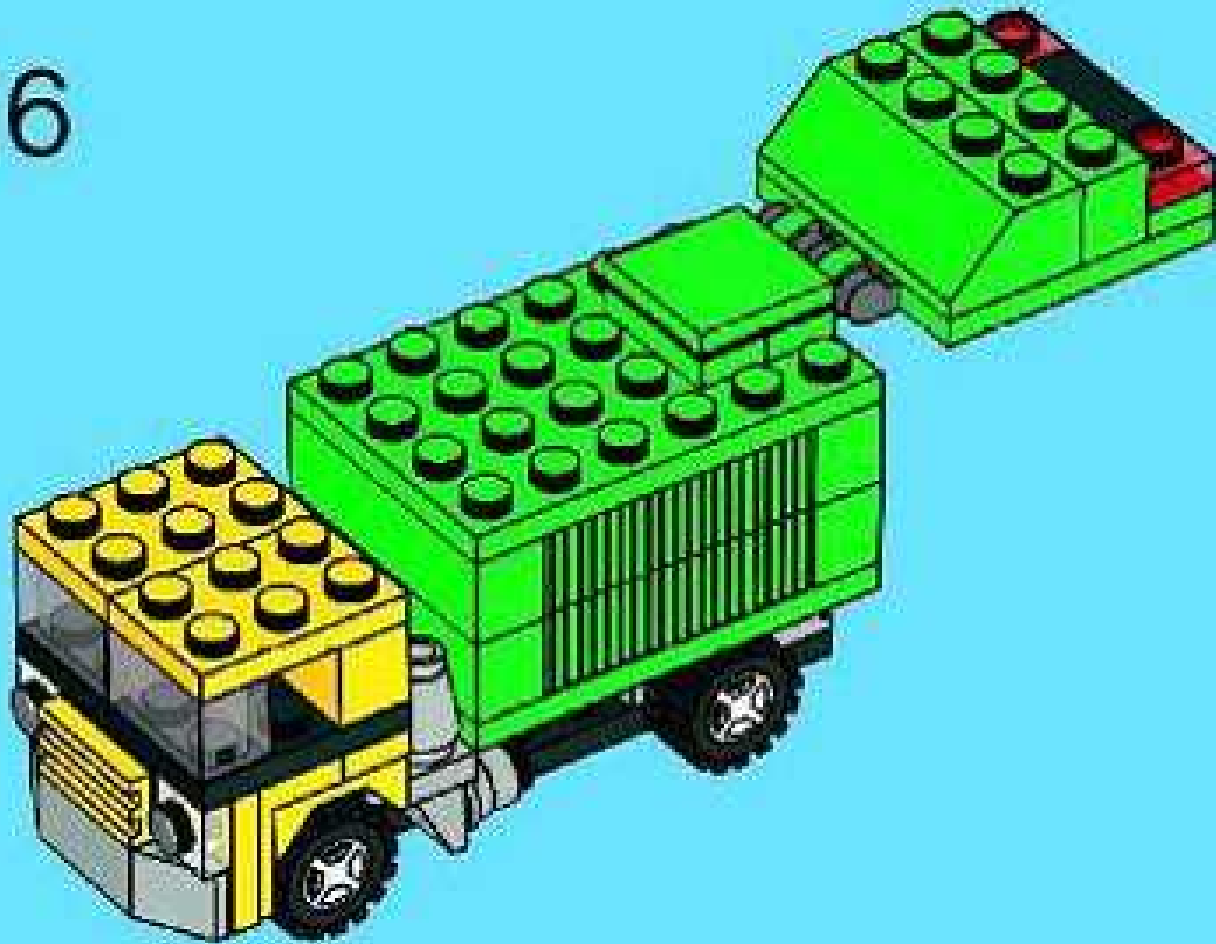 

17





4x
462401



2x
4226179



2x
3000841



1x
306926



1x
4124096



2x
302126



4x
4501046



2x
303426



1x
371024



3x
302124



1x
302024



1x
241224



1x
301024



1x
378824



2x
4277925



2x
452187



 
1x
4210631




4x
300528



3x
4112838

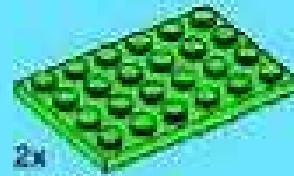

2x
4118671

 

1x
4907762



1x
302328



1x
4520671



8x
287728



3x
371028



1x
4141737



2x
4211504



1x
4211414



2x
4211477



1x
4529241



1x
4211445



1x
4211397



1x
4211469



4x
4521921



4x
4211525



2x
3000840



Customer Service

Kundenservice

Service Consommateurs

Servicio Al Consumidor

 
www.lego.com/service or dial



00800 5346 5555 :



1-800-422-5346 :





CREATOR

20011



BrickMaster