 




# CREATOR

20014

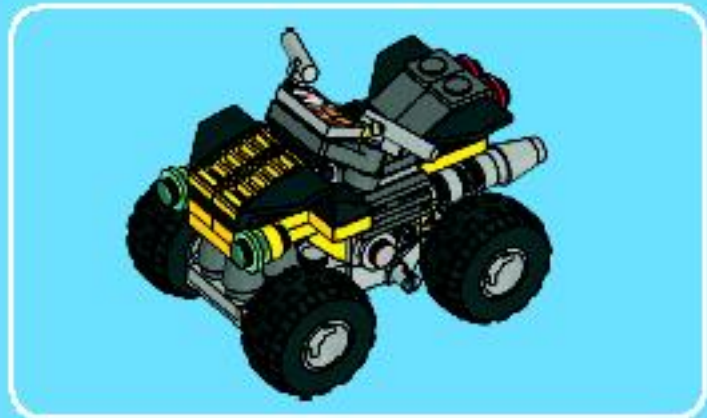 





1



2

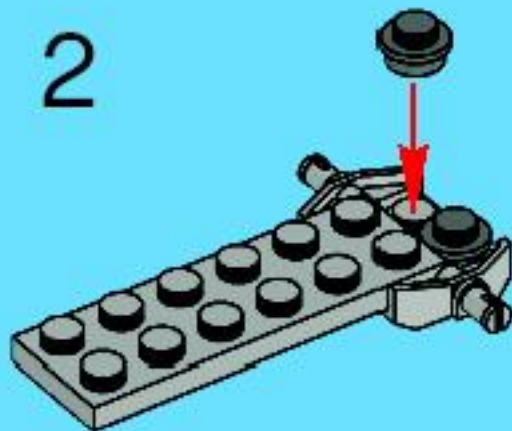


3

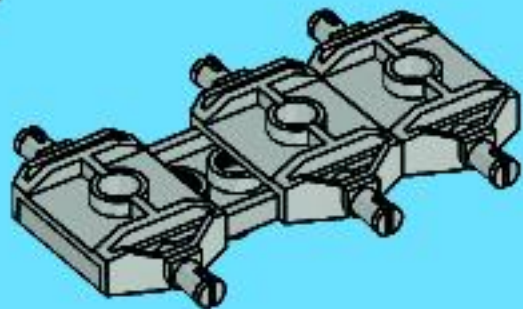 


4



 
5

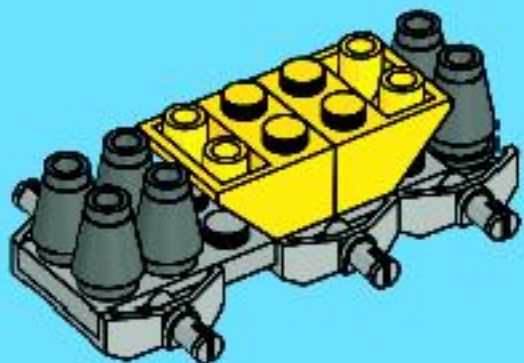

6

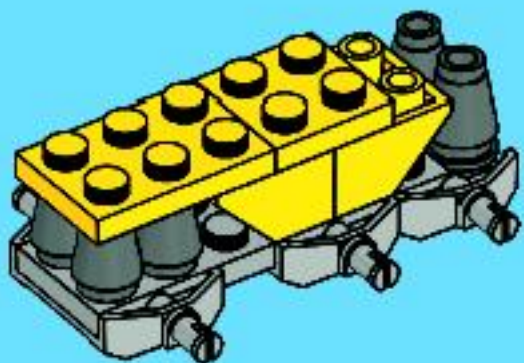 

7

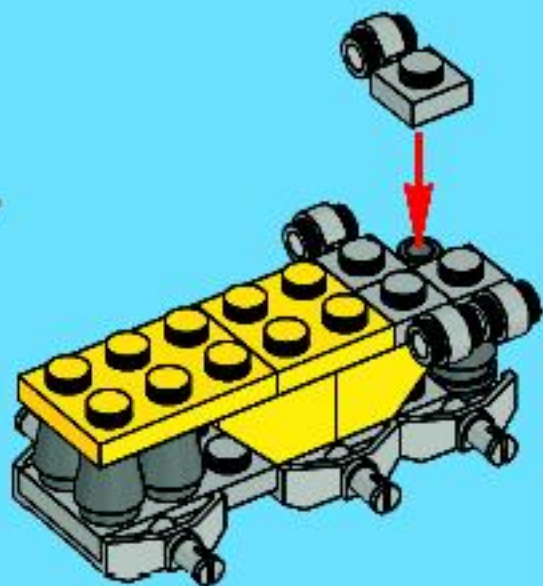 


1



2



 8

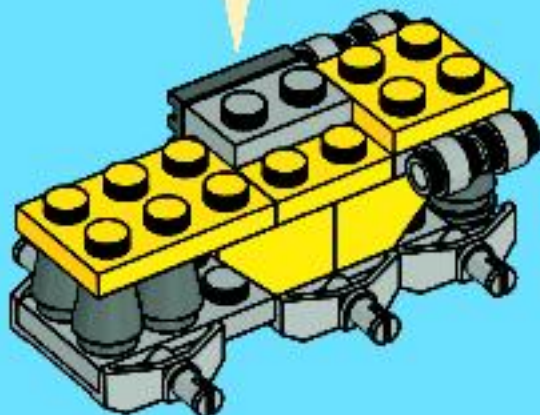


1




2



 
9

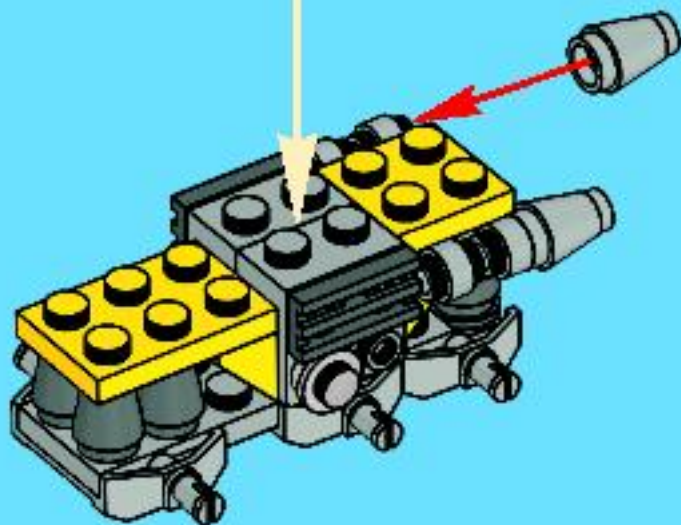


10

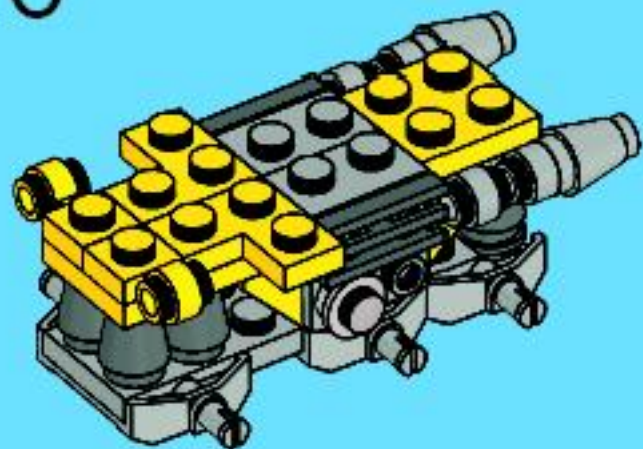 

11


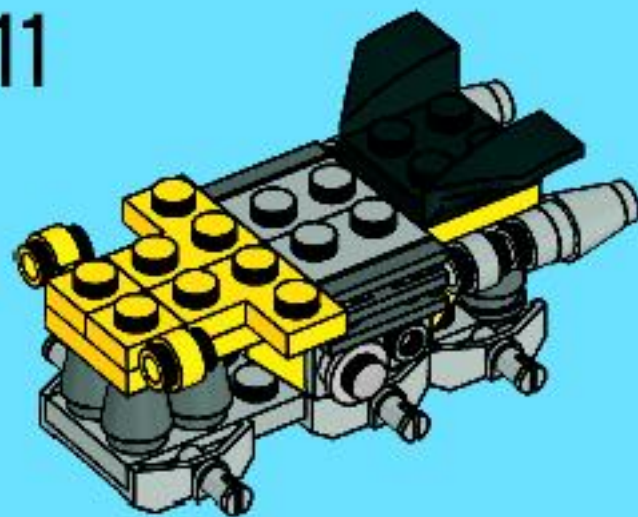 


12

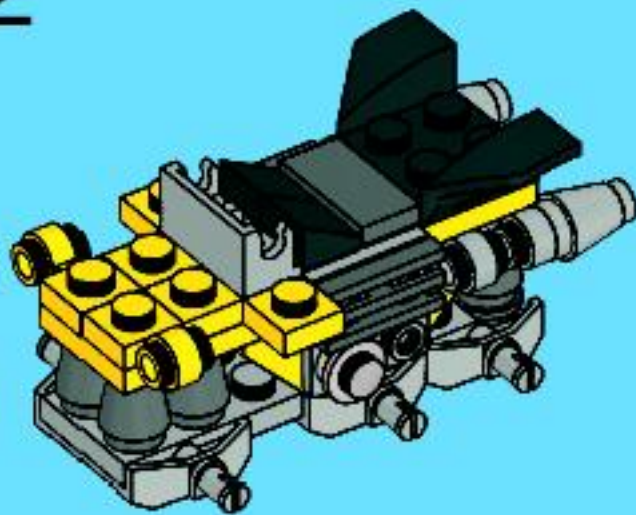 






13

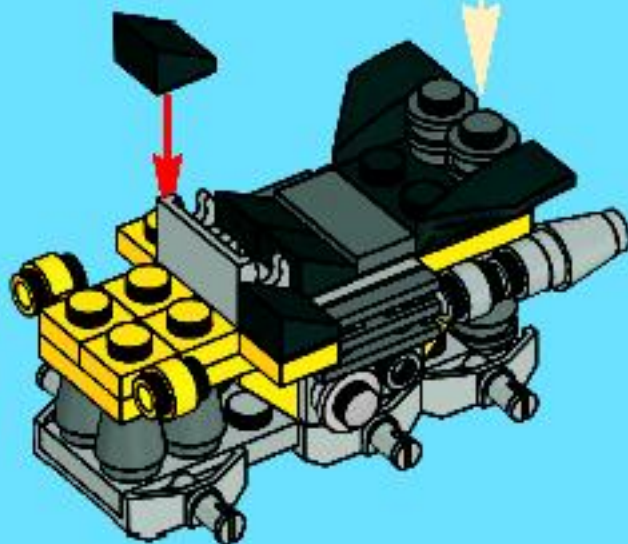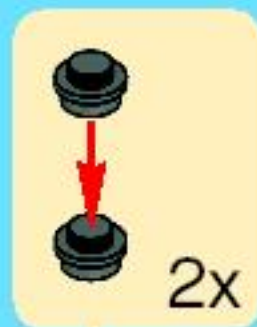  

14

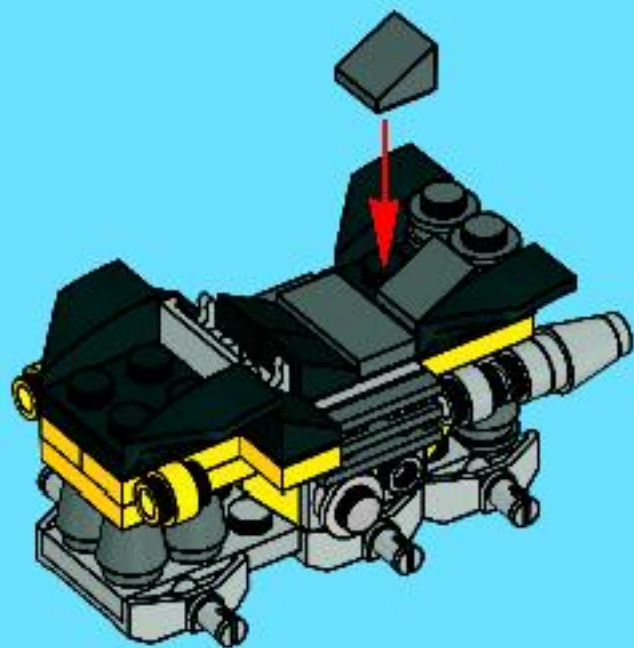 

15

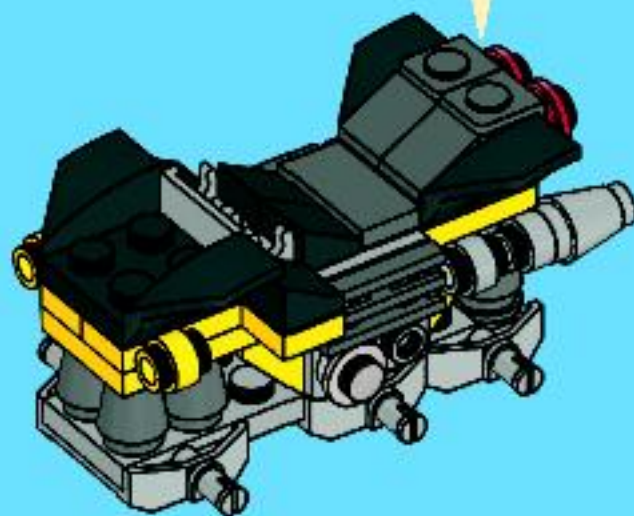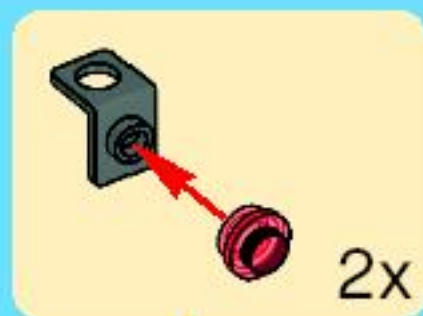  


1




2




 16

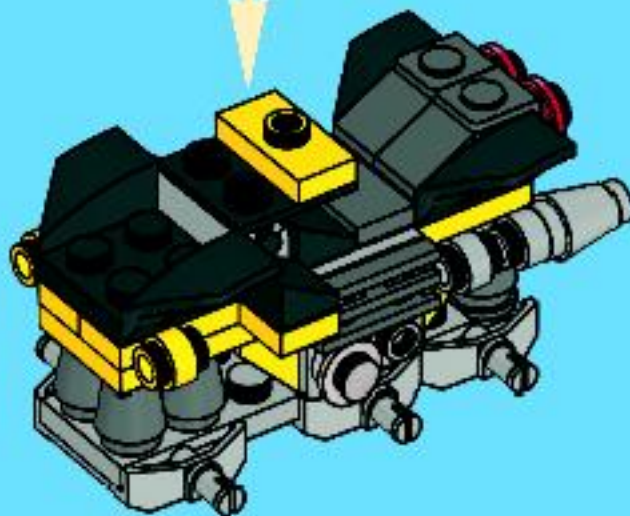


17

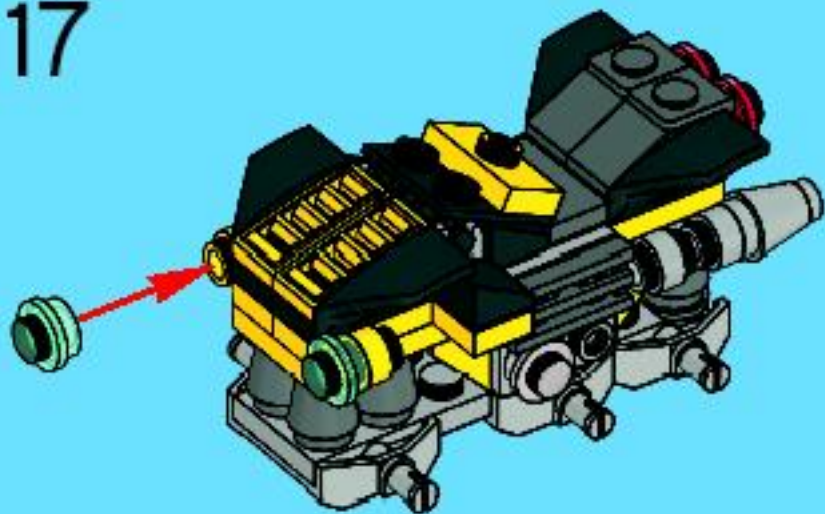 


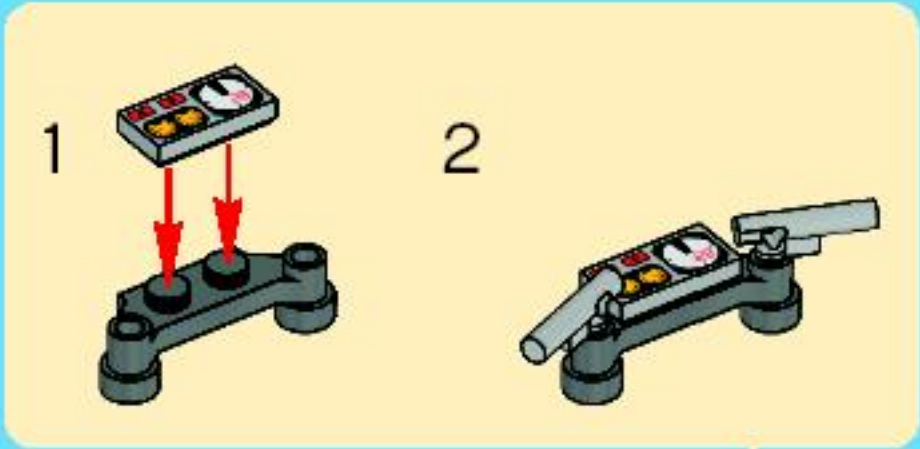 

18

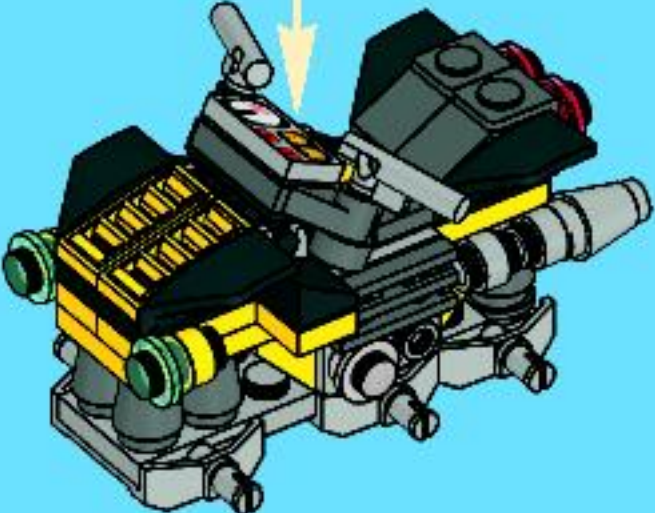 

19

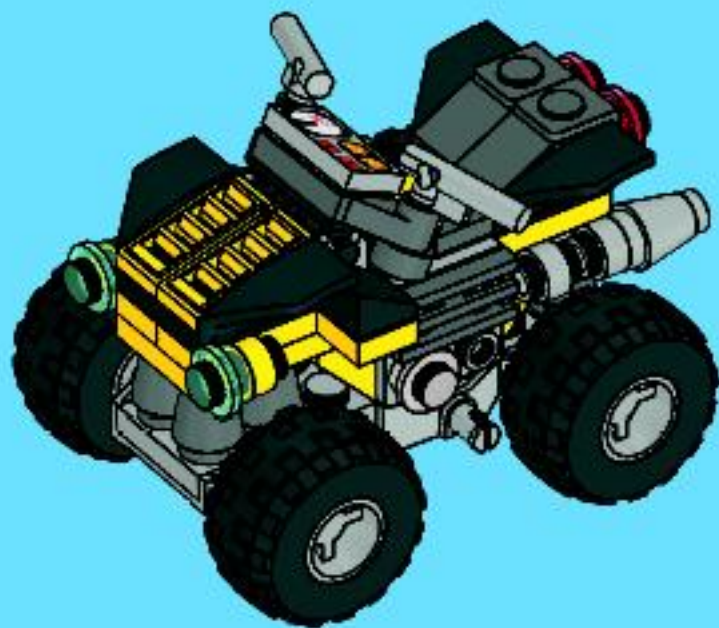 



4x  
4504382



2x  
4184813



4x  
4498340



1x  
4124096



2x  
4529241



4x  
4211477



2x  
4277927



3x  
4211569



1x  
4227776



 
1x  
4211469



2x  
4514195



4x  
4211764

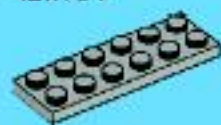

1x  
4211452



2x  
4540384



2x  
366024



2x  
302224



2x  
242024



1x  
302124



2x  
408124



1x  
379424



6x  
4529240



2x  
4504378



1x  
4211052



2x  
4210631



1x  
4217558



6x  
4210633



2x  
4210469



2x  
4249039



2x  
3005741



2x  
4163917



Customer Service

Kundenservice

Service Consommateurs

Servicio Al Consumidor

[www.lego.com/service](http://www.lego.com/service) or dial



00800 5346 5555 :



1-800-422-5346 :



©2010 The LEGO Group. 4587579