 


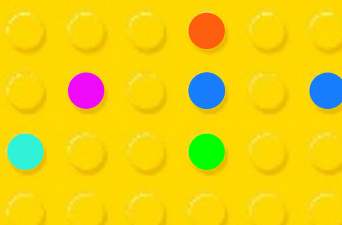

40091

 







2x

1

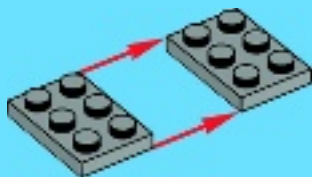

1x

 2

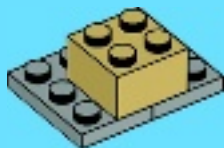


2x



2x

 3

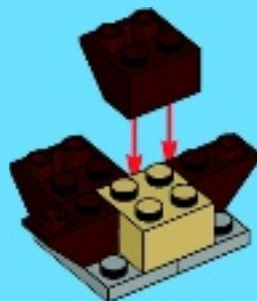



4x

 


2x

4



2x

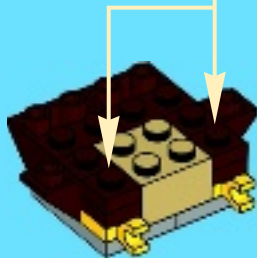

1x



1x

5





1x

 


1x




1x

6

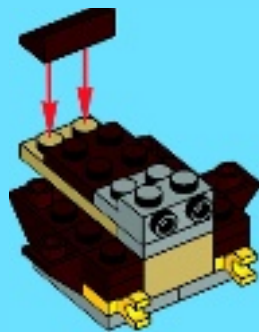

2x

 7

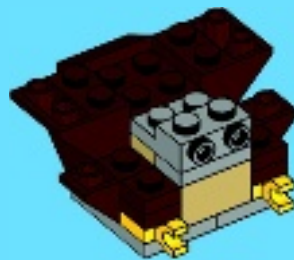




2x



2x

 8

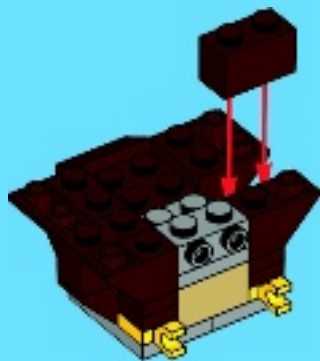

1x

 


1x



2x

9

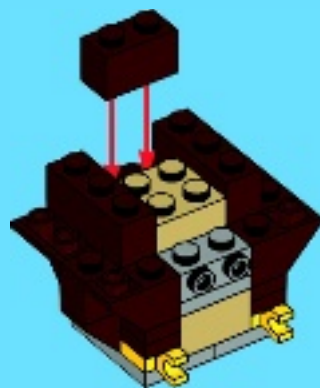




2x



2x

 12

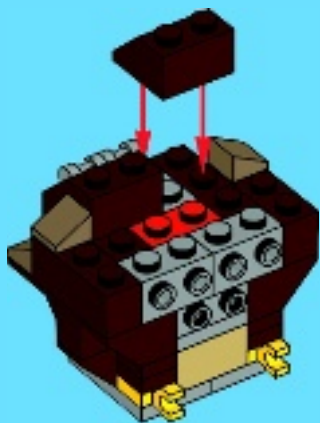


1x



2x

 13

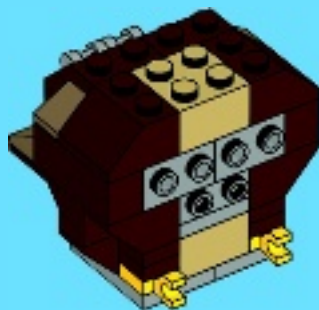




1x



1x

 14

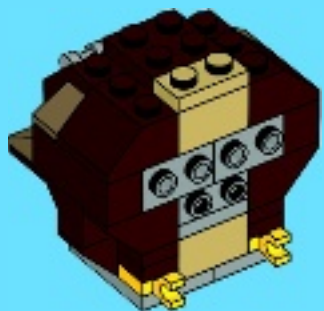



1x



2x

  
15

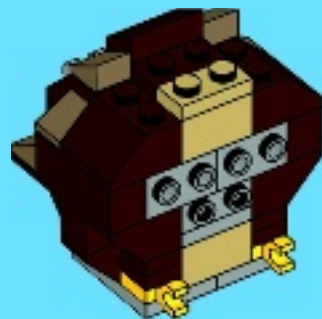



16

 
1

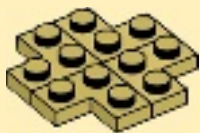


2



 3

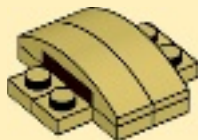

4

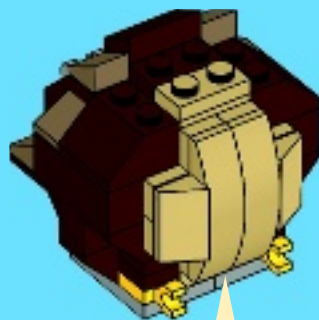 



2x

 
 
 


2x



2x

17

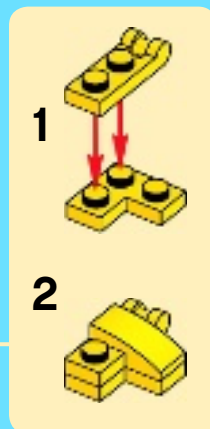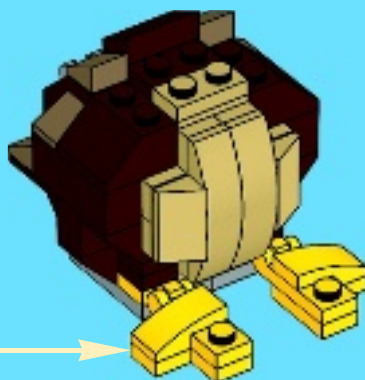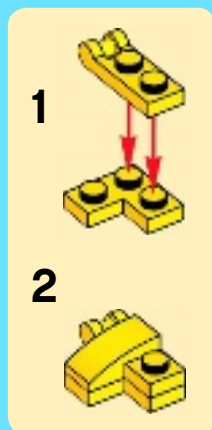



18

 
1



2




3

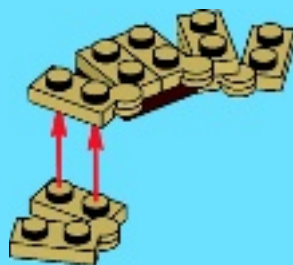


4






  5

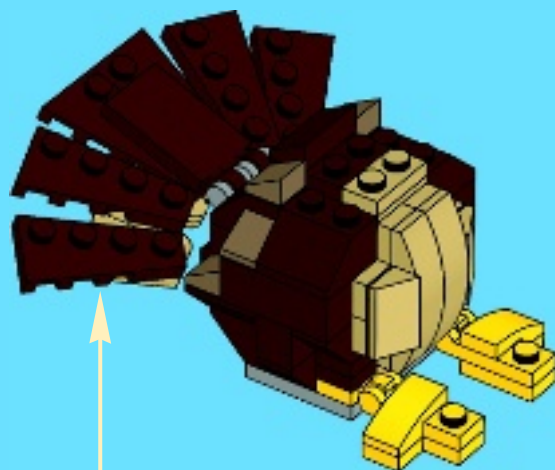

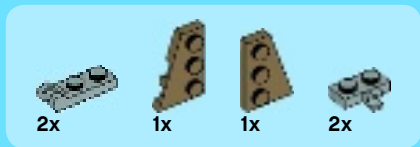

19

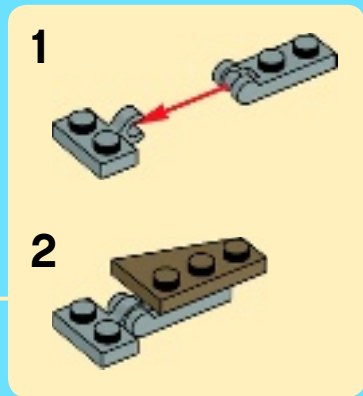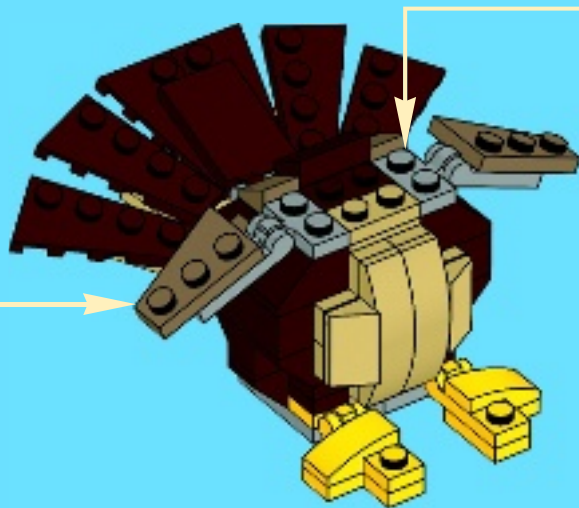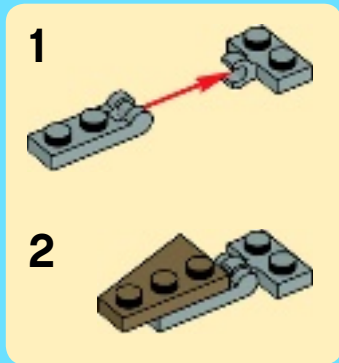   




1x



1x

 1

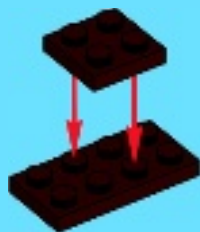


1x



2x

 2

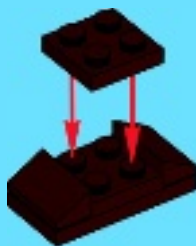



1x

3

 


2x



1x

4

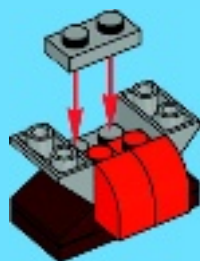



1x



1x



 
1x



1x

5

1



2



1x

 


1x



2x

6

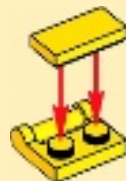



1x



1x

7



1x

 


2x



2x

8

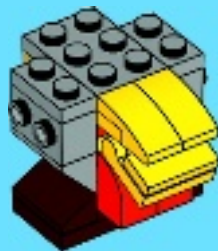



1x



 
2x

9



2x

10

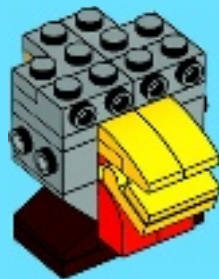



1x

 


2x



1x

11

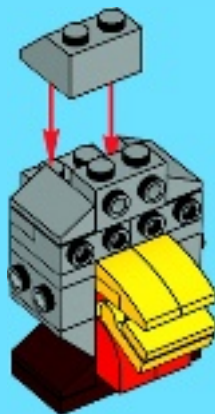


1x



2x

 12

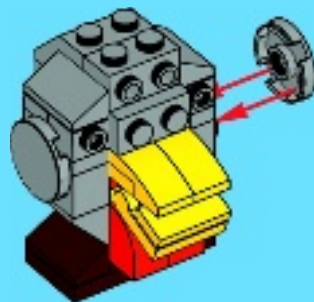



2x

 


 
2x

13





20

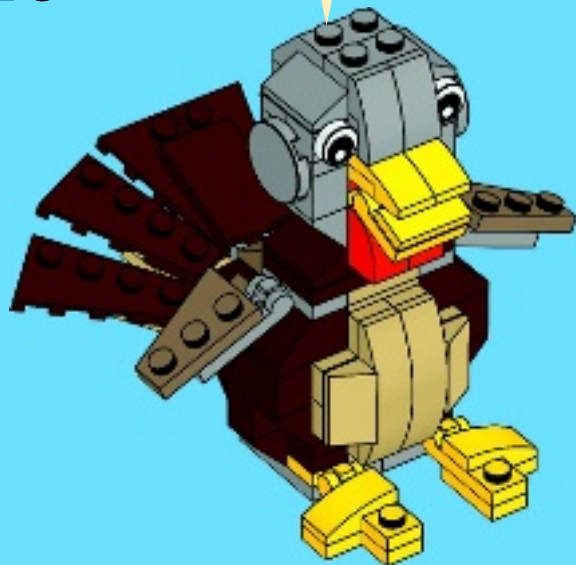

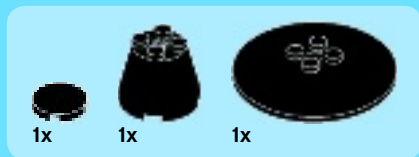

21

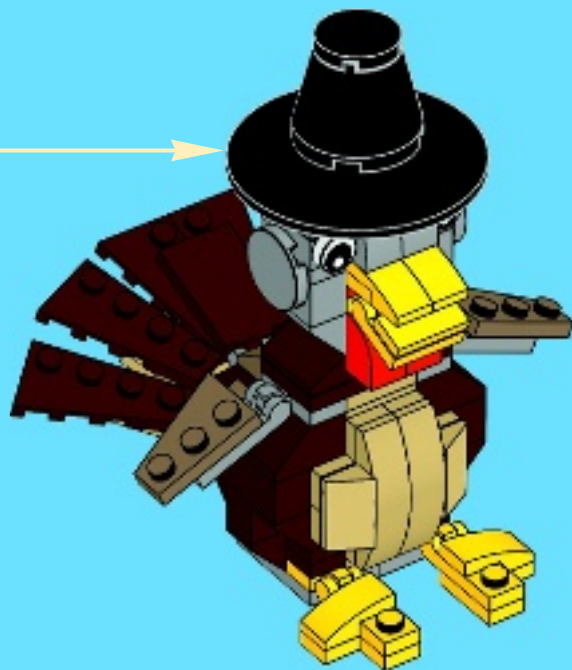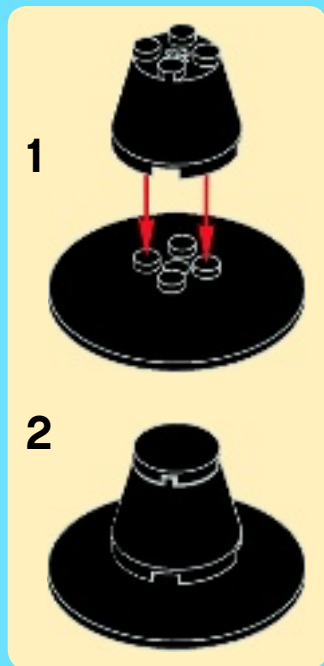  



Customer Service

Kundenservice

Service Consommateurs

Servicio Al Consumidor

LEGO.com/service or dial



: 00800 5346 5555

: 1-800-422-5346

